

pecron



PECRON TROLLEY T2

Installation Instruction

PACKING LIST:

	Frame *1		M6 Screw *4
	Anchor Plate *1		M5 Screw *4
	Trolley Rod *1		Washer *2
	Wheel *2		Wrench *2

INSTALLATION STEP:

1



Using 4mm end of the wrench to install the wheel with M6 screw and washer.

2



Using 3mm end of the wrench to install the trolley rod and anchor plate to the frame with M5 screw.


3



Using 4mm end of the wrench to fasten the joint part of the frame with M6 screw.



Diagram of installing accessory bag:

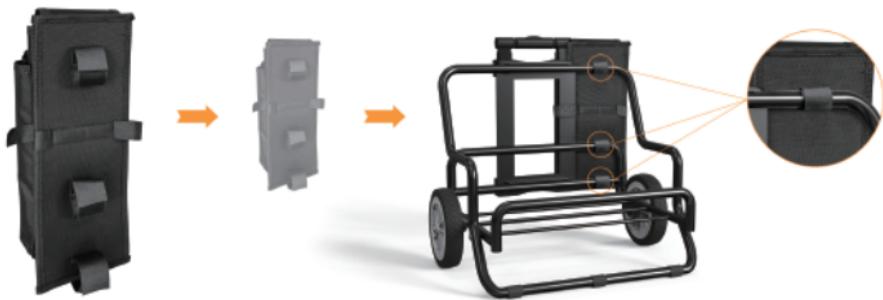

Fasten the Velcro on the back of the accessory bag to the frame of the trolley.



Fix the Velcro on the side of the accessory bag to the left/right side of the trolley.

パッケージ内容 :

	フレーム×1		M6 ねじ×4
	ドローバーの固定板金×1		M5 ねじ×4
	ドローバー×1		スペーサー×2
	ホイール×2		レンチ×2

取り付け手順 :

①



レンチの 4MM 端でスペーサーに M6 ネジを取り付け、両側のホイールを固定します。

②



レンチの 3MM 端で M5 ネジを取り付け、ドローバーと板金を固定します。

③



レンチの 4MM 端で、シャフト内へネジを締めます。

アクセサリーバッグを取り付ける方法図：



アクセサリーバッグに背面付きのベルクロでカートフレームに固定します。



アクセサリーバッグに側面付きのベルクロでカートのトロリーバーの左/右の一方に固定します。

装箱单:

	小推车框架 *1		M6螺丝 *4
	拉杆固定钣金 *1		M5螺丝 *4
	拉杆 *1		垫片 *2
	轮子 *2		扳手 *2

安装步骤:

①



使用扳手4MM端，安装M6螺丝穿过垫片固定两侧轮子。

②



使用扳手3MM端，安装M5螺丝固定拉杆与拉杆钣金到框架上。


③



使用扳手4MM端，将旋转轴处螺丝拧紧。



配件袋安装步骤图：

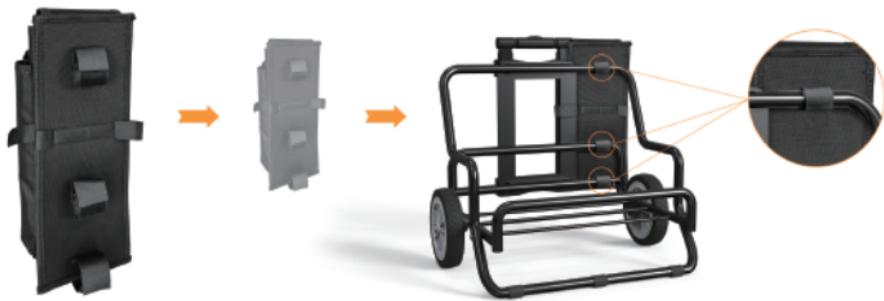

配件袋后面魔术贴固定在小推车框架上。



配件袋侧面魔术贴固定在小推车拉杆左面/右面上。

pecrön